



Reservoir cap replacement

How to remove and install a reservoir cap on 56mm shocks

Written By: Sebastien Blain

 
 


Step 1 — Removing protector cap




- Using the appropriate tool, unscrew to protector cap.

Step 2 — Removing reservoir cap

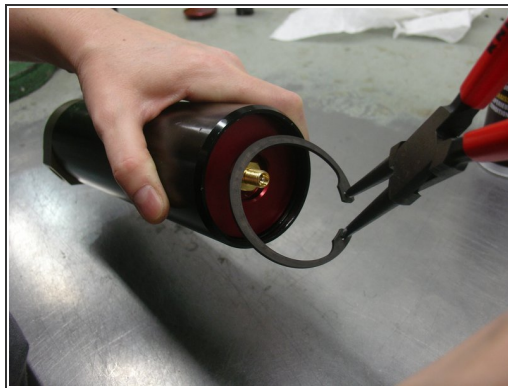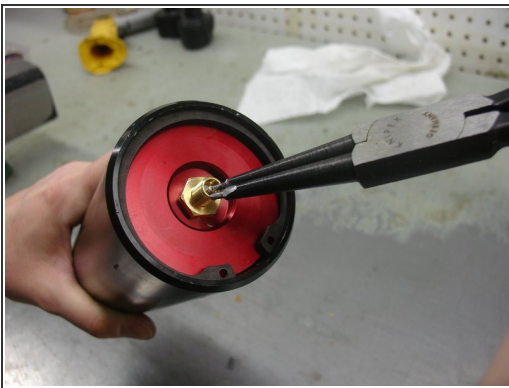

- ***WARNING*** Reservoir contain high gas pressure. Be sure the pressure is released before removing the cap.
- Push de internal valve to remove nitrogen pressure.
- Remove retaining ring and pull the cap out with the appropriate tool.

 Step 3 — Installing new cap

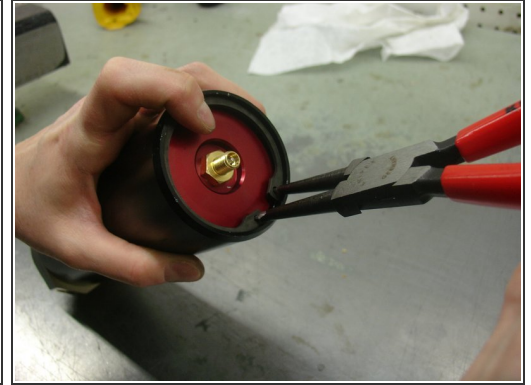

- Apply some grease on the o-ring and push the cap inside the reservoir.
- Re-install the retaining ring, and make sure it is sitting in its groove

Step 4 — Charging reservoir



- Charge the reservoir at 200 psi of nitrogen.
- Install the protective cap.