



SKI-DOO SUMMIT 850 2017-2020

FLS-78025

Written By: Nicolas



INTRODUCTION


Also fit on expert package

Step 1 — SKI-DOO SUMMIT 850 2017-2020



- Lift the front of the snowmobile in such a way that the skis are off the ground.
- Remove the stock shocks according to the procedures recommended by the manufacturer.
- Install the Elka front shocks with the piggyback reservoir at the top and pointing forwards of the snowmobile as shown

Step 2

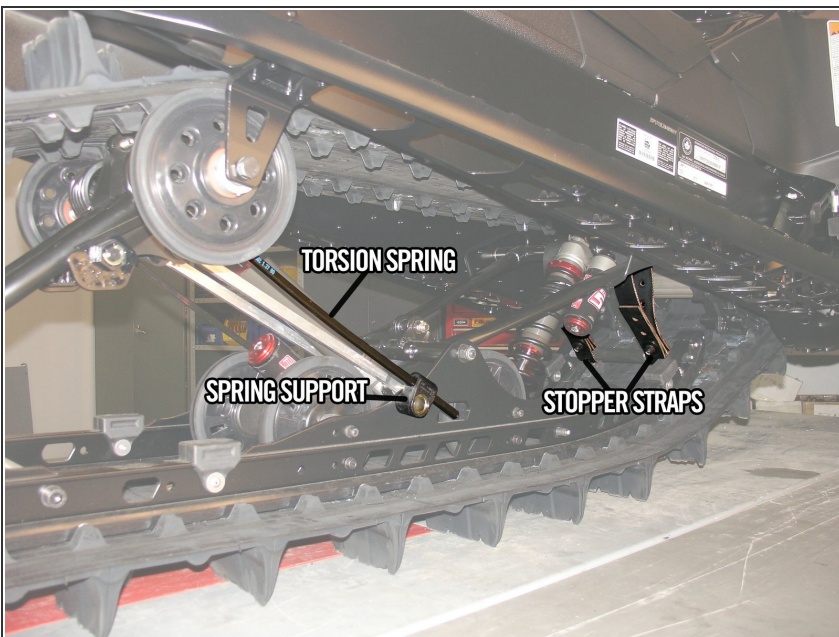


- Remove the limiter strap.
- Lift the rear of the snowmobile in such a way that the track is not touching the ground.
- Remove the two spring supports to remove any tension on the torsion springs.
- Remove the stock suspension.

Step 3



- Install the sleeve through the bottom eye with the plastic spacer on both side of the eyelet.

Step 4

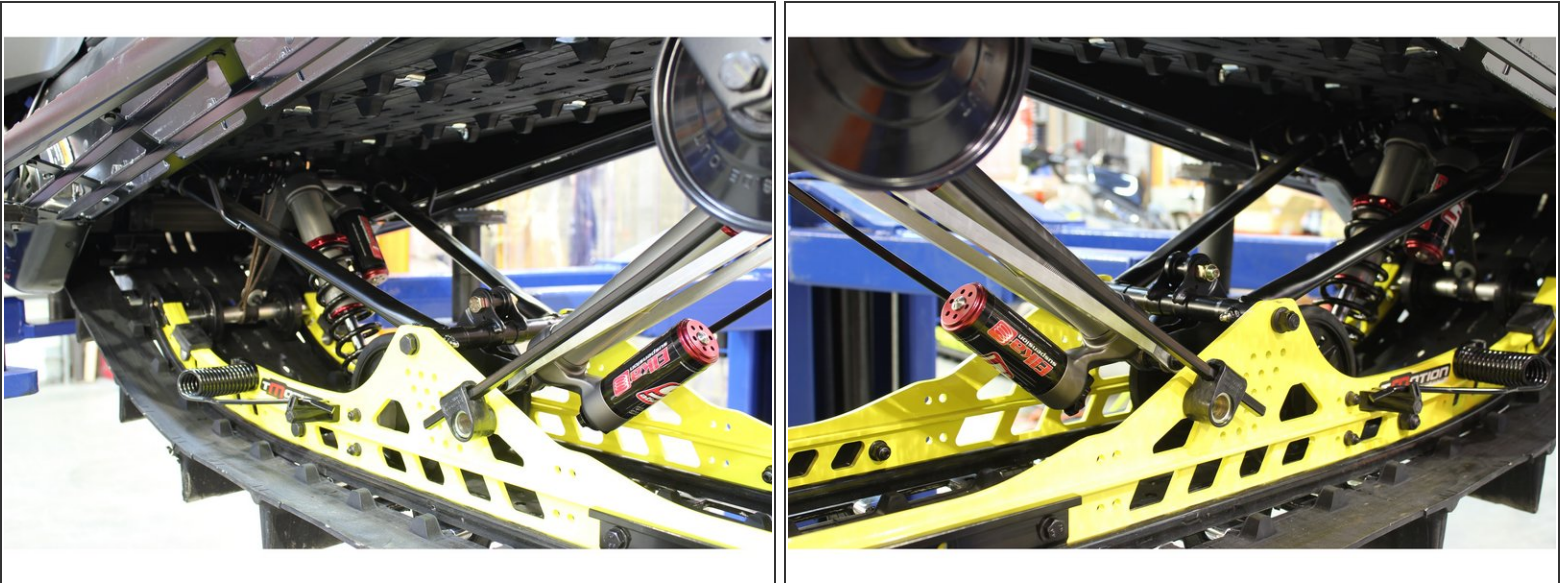

- Install the Elka center shock with piggyback reservoir at the top and pointing towards the right side of the snowmobile as show on the photo.
- Install the Elka rear shock with the piggyback reservoir at the bottom and oriented towards the rear of the snowmobile as shown on the photo.
- Re-install the two spring supports.
- Lower the snowmobile completely and re-install the limiter strap.