



Arctic Cat 1000XT 2013-17 and TRV/Alterra TRV 550/700/1000 2013-17

FLS-70001_revA

Written By: Sebastien Blain



Step 1 — Removing the stock shocks




- Lift the vehicle using a jack or stand so that the wheels are off the ground. Refer to your vehicle's owner manual for specific instructions on how to remove the stock shocks. Keep your original bolts to re-use when installing your new Elka shocks.

Step 2 — Installing the new Elka front shocks



- Install the front new Elka shocks with the reservoir (on Stage 3-4-5) or Schraeder nitrogen valve (on Stage 1-2) **at the top of vehicle.** (left side shown).

Step 3 — Installing the front shocks (continued)

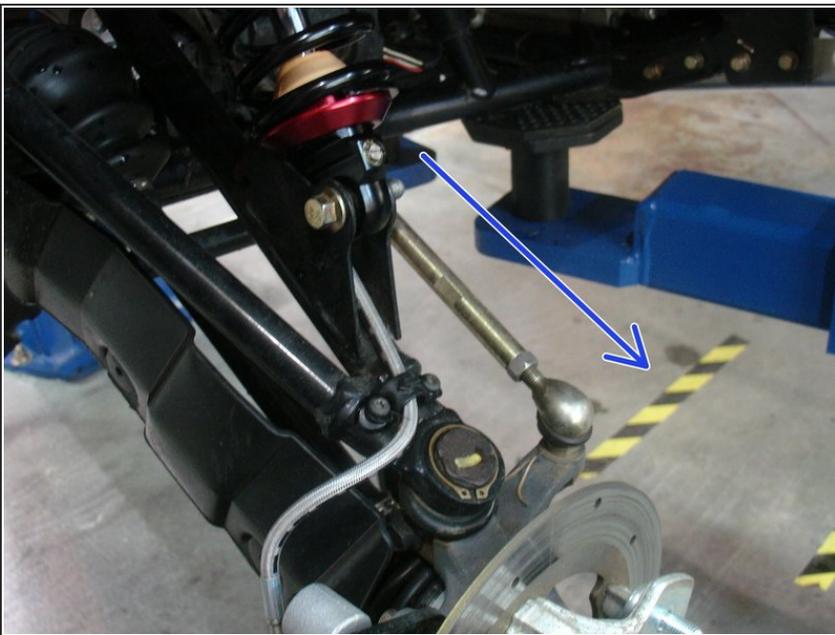

- On Stage 2, Stage 4 and Stage 5 models, the lower shock eyelets should be installed with the rebound adjuster oriented **towards the outside of the vehicle** as shown by the blue Arrow on the photo (left side shown). If needed, you can turn the lower eyelet to orient properly.

Step 4 — Installing the new Elka rear shocks



- Install the **new Elka rear shocks with the piggyback** reservoir at the top **and oriented** towards the front of the vehicle" as indicated by the red Arrow on the photo
- For Stage 1 and Stage 2 shocks, install them with the shraedder valve facing the outside of vehicle.
- Use the OEM steel spacer for lower mounting.

Step 5 — Installing the new Elka rear shocks (continued)



- On Stage 2, Stage 4, and Stage 5 models the rebound adjuster located on lower eyelet of the shocks should be oriented **towards the inside of the vehicle**, as shown. (Left side shown). If needed, you can turn the lower eyelet to orient properly.
- **Note:** We highly recommend a tire pressure of ± 7 psi.

