



Arctic Cat M8000 Sno Pro 2014-15

FLS-48002

Written By: Nicolas



Step 1 — FRONT SHOCK INSTALL




- Lift the front of the snowmobile in such a way that the skis are off the ground.
- Remove the stock shocks according to the procedures recommended by the manufacturer.
- Install the Elka front shocks with the piggyback reservoir at the top and pointing outside of the snowmobile as shown.
- The lower shock eyelets should be installed with the rebound adjuster oriented towards the outside of the vehicle as shown.

Step 2 — CENTER SHOCK INSTALL



- Remove the limiter strap and idler wheels.
- Lift the rear of the snowmobile in such a way that the track is not touching the ground.
- Remove the stock suspension.
- Install the Elka center shock with piggyback reservoir at the top and pointing towards the right side of the snowmobile as show on the photo.

Step 3 — REAR SHOCK INSTALL

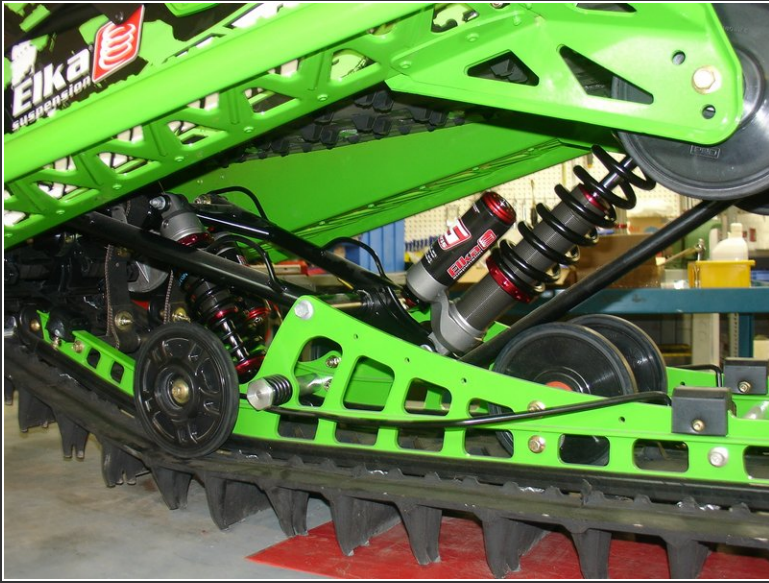

- Install the Elka rear shock with the piggyback reservoir install on the left side with the rebound facing upwards as shown on the photo.
- Lower the snowmobile completely and re-install the limiter strap.