




Polaris RZR1000XP (all years)

FLS-53015_revA

Written By: Pierre-Yves Deneault

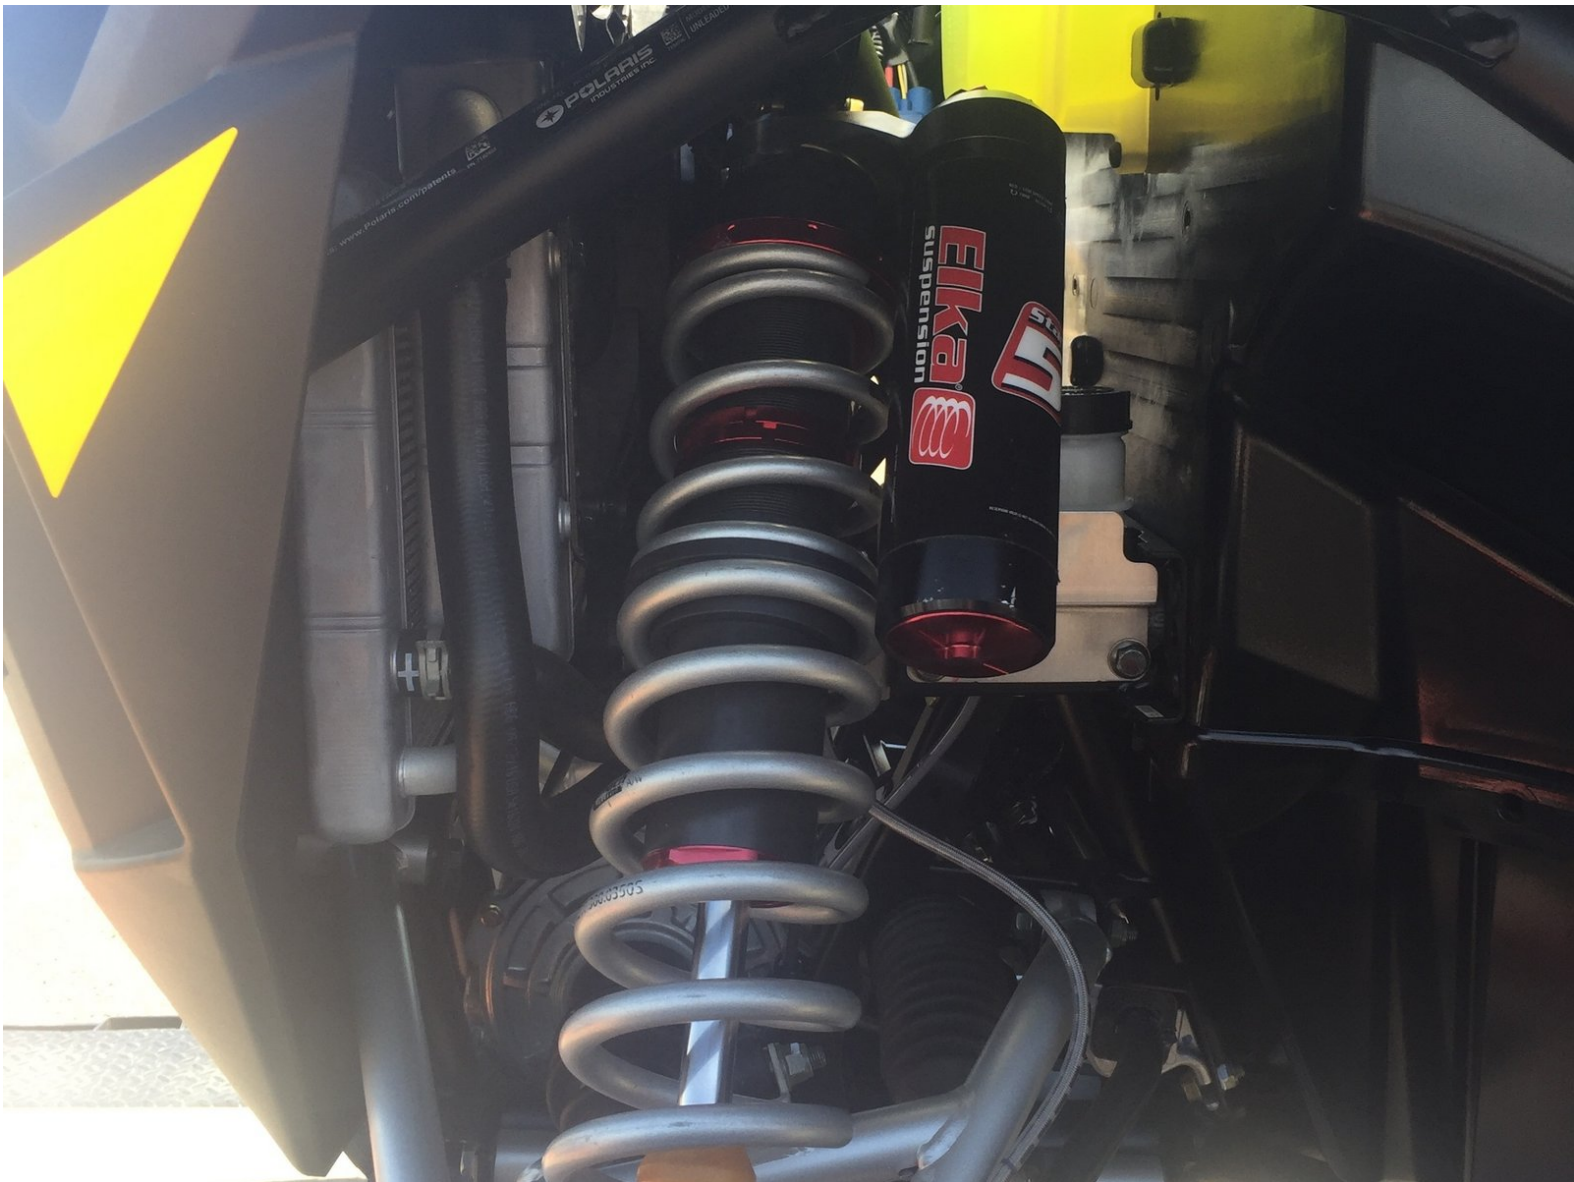


Step 1 — Front Shock



- Lift the vehicle using a jack or stand so that the wheels are off the ground. Refer to your vehicle's owner manual for specific instructions on how to remove the stock shocks. Keep your original bolts to re-use when installing your new Elka shocks.
- Install the new Elka front shocks with the reservoir oriented towards the back of the vehicle.

Step 2 — Rear Shock

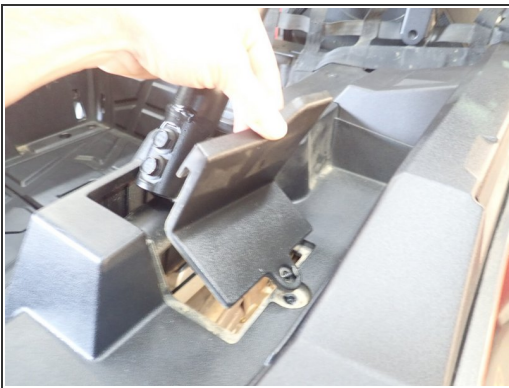

- Lift the vehicle using a jack or stand so that the wheels are off the ground. Refer to your vehicle's owner manual for specific instructions on how to remove the stock shocks. Keep your original bolts to re-use when installing your new Elka shocks.
- Install the new Elka rear shocks and use the opening in the bed's plastic section to pass the reservoir. Make sure the hose of the reservoir is routed as shown.

Step 3



- Attach the reservoir to the rear of the roll cage as shown using the provided mounting bracket.