



Arctic Cat WILDCAT XX 2019-2020

FLS-83047

Written By: Nicolas





Step 1 — Arctic Cat WILDCAT XX 2019-2020



- Use a jack or stand to lift the vehicle so the wheels are completely off the ground.
- Remove the stock shocks. Refer to the vehicle's owner manual if needed.
- Install your new Elka front shocks with the piggyback head towards the rear of the vehicle and with the reservoir pointing out away from the vehicle. If needed, rotate the lower eyelet so the rebound adjuster is pointing towards the rear of the vehicle.

Step 2

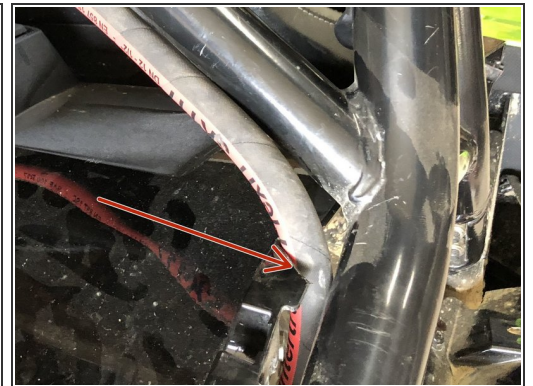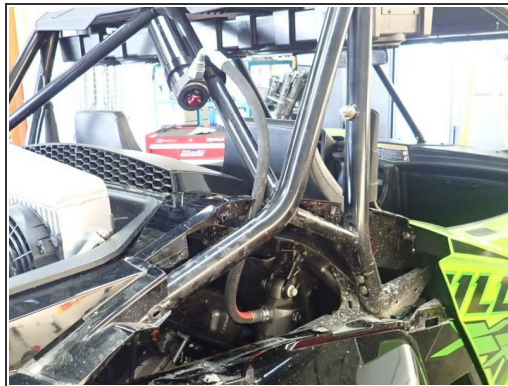

- Lift the vehicle using a jack or stand so that the wheels are off the ground. Refer to your vehicle's owner manual for specific instructions on how to remove the stock shocks. Keep your original bolts to re-use when installing your new Elka shocks.
- Install the new Elka rear shocks, remove the side plastic section to pass the reservoir. Make sure the hose of the reservoir is routed as shown.
- use a jig saw to cut the plastic near the roll cage where the hose will be routed.

Step 3



- Attach the reservoir to the rear of the roll cage as shown using the provided mounting bracket.