



# Arctic Cat Zr 200 2018 / Yamaha Snoscoot

## 2018-2020

FLS-88032

Written By: Nicolas



## Step 1 — Installing Front shocks



- Before installing the front shock, rebound adjuster must be position at 180° (red arrow) of the reservoir and the spring slot (blue arrow) be in line with the reservoir as shown on the pictures.


## Step 2 — Installing Front Shocks (continued)



- Lift the front of the snowmobile vehicle in such a way that the skis are off the ground.
- Install the Elka front shocks with the piggyback reservoir at the top and pointing towards the sides of the snowmobile as shown.
- Make sure the rebound adjuster located on the lower mounting eyelet of the shock is accessible and facing inward of the snowmobile. You can rotate the eyelet clockwise if needed.



### Step 3 — remove Rear Shock

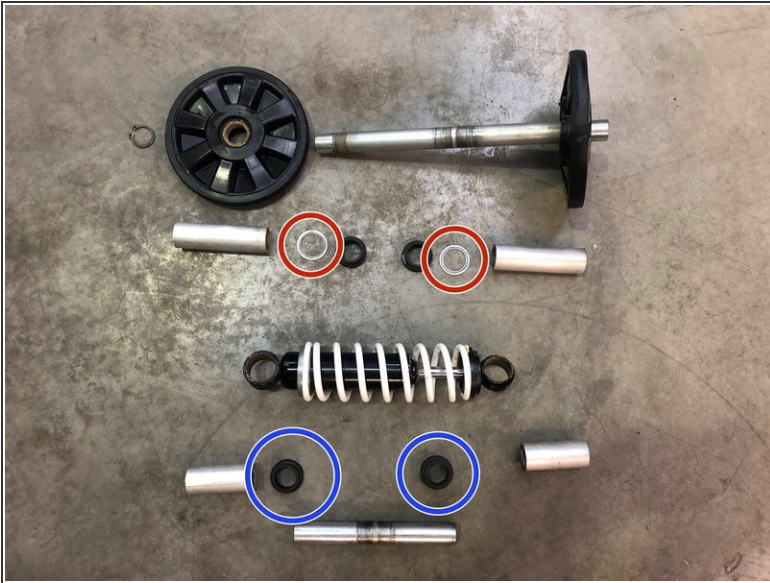

- Remove the limiter strap and idle wheel.
- Lift the rear of the snowmobile in such a way that the track is not touching the ground.
- install the oem plastic spacer on the lower part of the ELKA suspension (bleu) and take the steal washer from the oem top and install those at the bottom (red)

## Step 4 — install rear shock



- install the oem shaft back on the Elka suspension and make sure you install the oem boushing at the bottom (blue) and the steel washer (red)
- Make sure you install the reservoir of the shock ass shown on the picture .