



Can-Am Maverick Sport 2019-2020

FLS-93042

Written By: Maxime Moquin





TOOLS:

- 18mm Socket/Ratchet (1)
 - 18mm Wrench (1)
-


Step 1 — FRONT SHOCKS



- ❗ **IMPORTANT:** The passenger's side piggyback head and reservoir must be oriented towards the front of the vehicle and pointing slightly inwards as shown below. The driver side piggyback will point towards the rear (away from the radiator) and slightly outwards.

- ⚠ Always point the rebound adjuster towards the rear of the vehicle, to reduce the risk of damage to the adjuster.

Step 2 — REAR SHOCKS

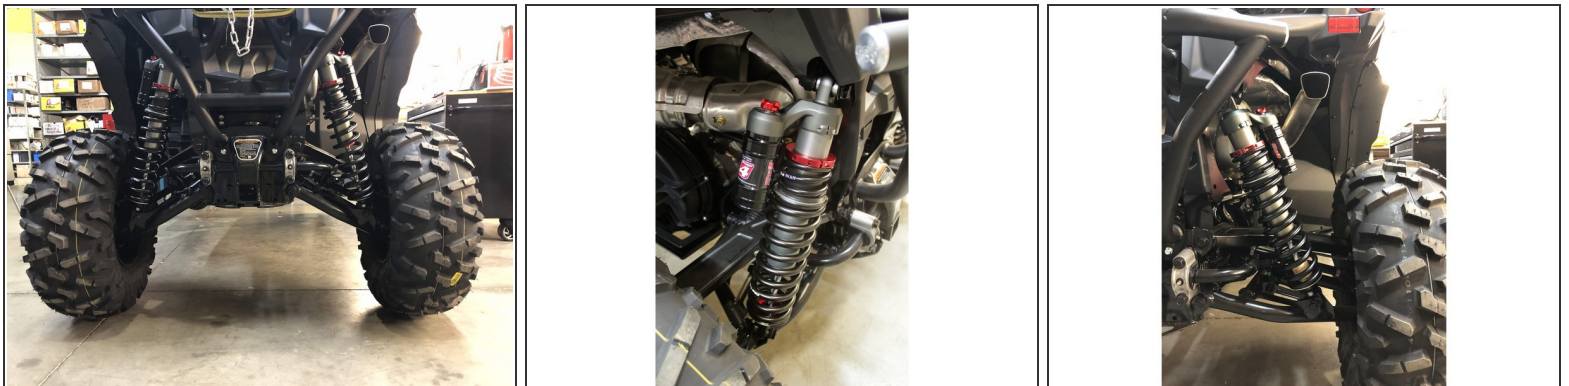

- ❗ **IMPORTANT:** The piggyback head and reservoir must be slightly oriented towards the front of the vehicle.

- Install shocks with the reservoir pointing slightly forward and towards the outside of the vehicle.

- ⚠ Always point the rebound adjuster towards the rear of the vehicle.