



Suzuki KingQuad 750 AXI 2009-UP

FLS-52048_revB

Written By: Sebastien Blain



Step 1 — Removing the stock shocks



- Lift the vehicle using a jack or stand so that the wheels are off the ground. Refer to your vehicle's owner manual for specific instructions on how to remove the stock shocks. Keep your original bolts to re-use when installing your new Elka shocks.

Step 2 — Installing the new Elka front shocks




- Install the front new Elka shocks with the reservoir (on Stage 3-4-5) or Schraeder nitrogen valve (on Stage 1-2) **at the top of vehicle.** (left side shown).
- A plastic wrap can be installed to avoid the mud guard to rub on the head of shocks. (See yellow Arrow).

Step 3 — Installing the front shocks (continued)



- On Stage 2, Stage 4 and Stage 5 models, the lower shock eyelets should be installed with the rebound adjuster oriented **towards the outside of the vehicle** as shown by the blue Arrow on the photo (right side shown). If needed, you can turn the lower eyelet to orient properly.

Step 4 — Installing the new Elka rear shocks

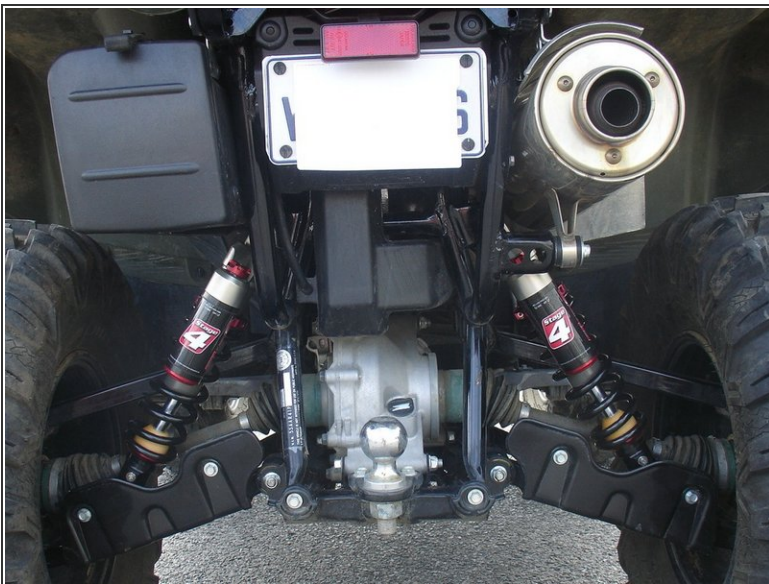

- Install both new Elka rear shock with the piggyback **reservoir at the top** and oriented **towards the rear of the vehicle** .
- On Stage 1 and Stage 2, the left and the right shock are the same. Just install them **with the shraeder nitrogen valve at the top of vehicle**.

Step 5 — Installing the new Elka rear shocks (continued)



- On Stage 2, Stage 4, and Stage 5 models the rebound adjuster located on lower eyelet of the shocks should be oriented **towards the rear of the vehicle**, as shown. (Right side shown). If needed, you can turn the lower eyelet to orient properly.
- **Note:** We highly recommend a tire pressure of ± 7 psi.