






Polaris RZR 900 S (2015-up)

FLS-53018

Written By: Steve Boulay

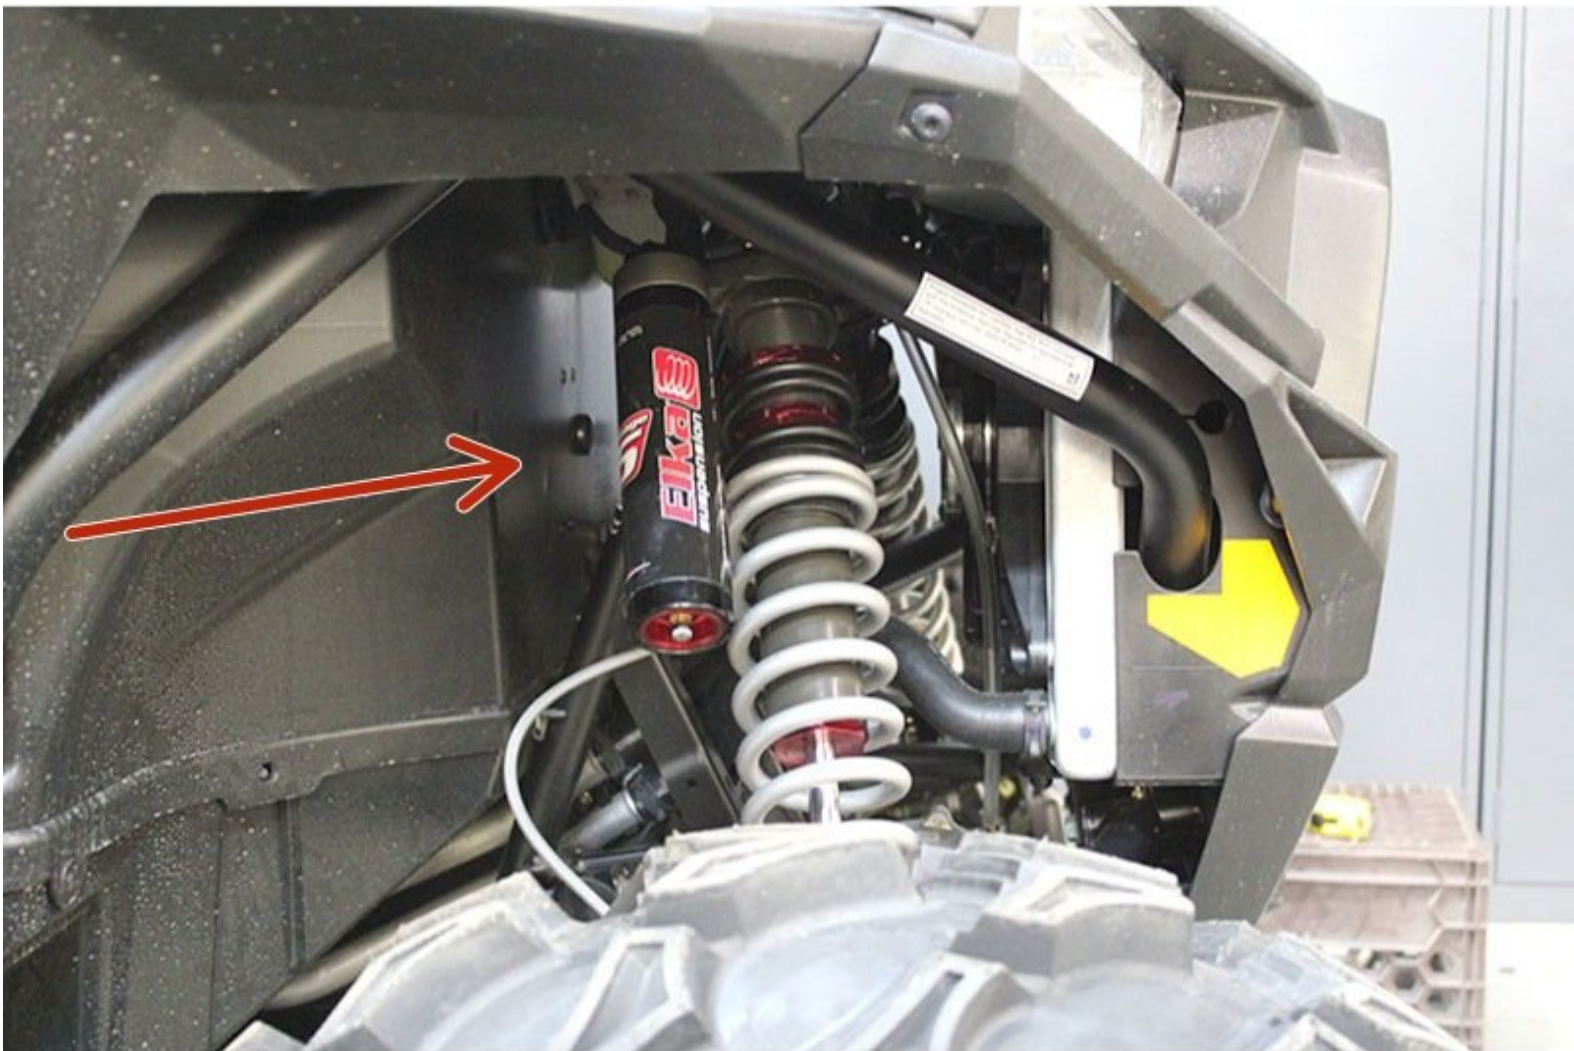


Step 1 — FRONT SHOCKS INSTALLATION

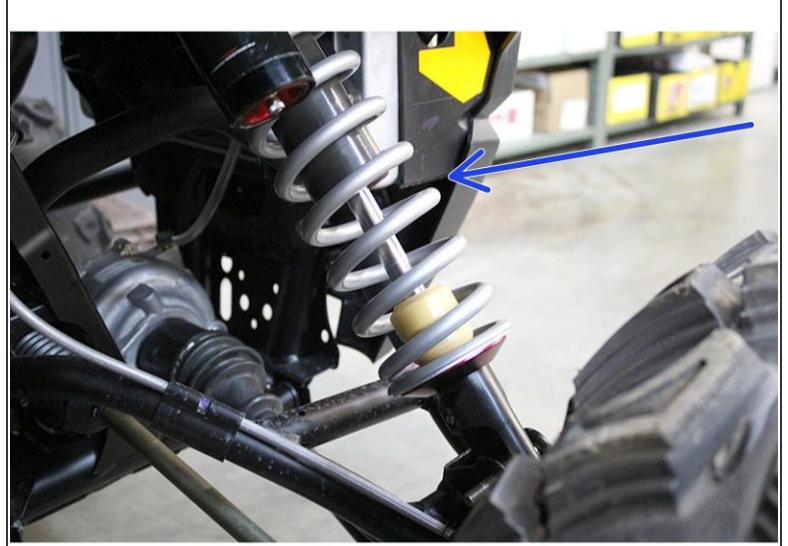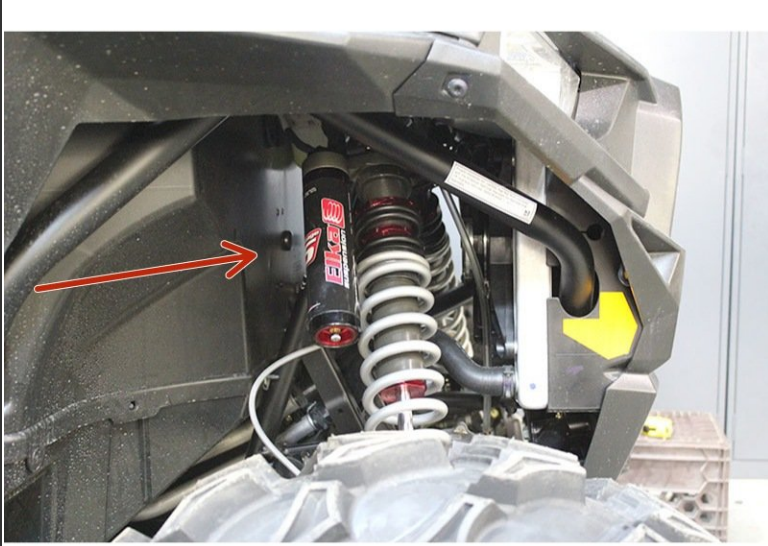

- Use a jack or stand to lift the vehicle so the wheels are completely off the ground.
- Remove the stock shocks. Refer to the vehicle's owner manual if needed.
- Install your new Elka front shocks with the piggyback head towards the rear of the vehicle and with the reservoir pointing out away from the vehicle. If needed, rotate the lower eyelet so the rebound adjuster is pointing towards the rear of the vehicle.
- **FRONT RIGHT SHOCK, VIEWED FROM RIGHT SIDE OF THE VEHICLE .**
- **FRONT RIGHT SHOCK, VIEWED FROM RIGHT SIDE OF THE VEHICLE .**

Step 2 — REAR SHOCKS INSTALLATION

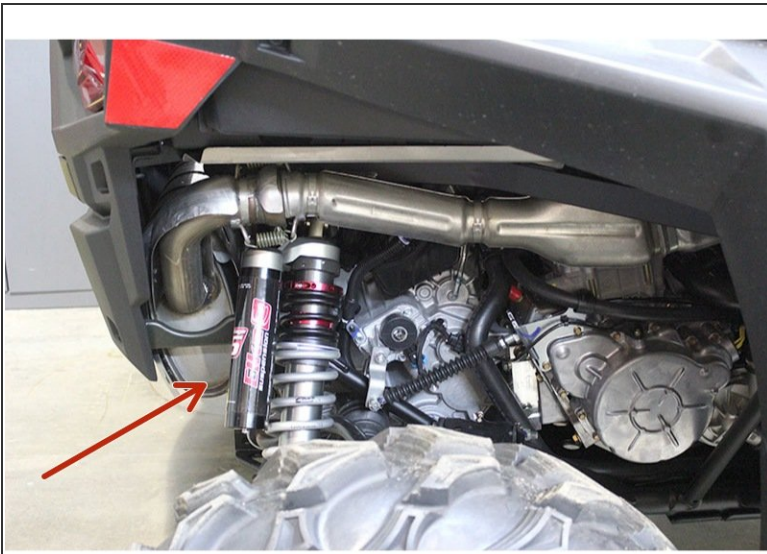

- Install your new Elka rear shocks with the piggyback head towards the rear of the vehicle and with the reservoir pointing out away from the vehicle. If needed, rotate the lower eyelet so the rebound adjuster is pointing towards the rear of the vehicle.
- Installation is completed.
- **REAR RIGHT SHOCK, VIEWED FROM RIGHT SIDE OF THE VEHICLE.**
- **REAR SHOCKS, VIEWED FROM BEHIND THE VEHICLE.**