





# CF MOTO SNYPER Z-8 (2013-up)

Written By: Steve Boulay

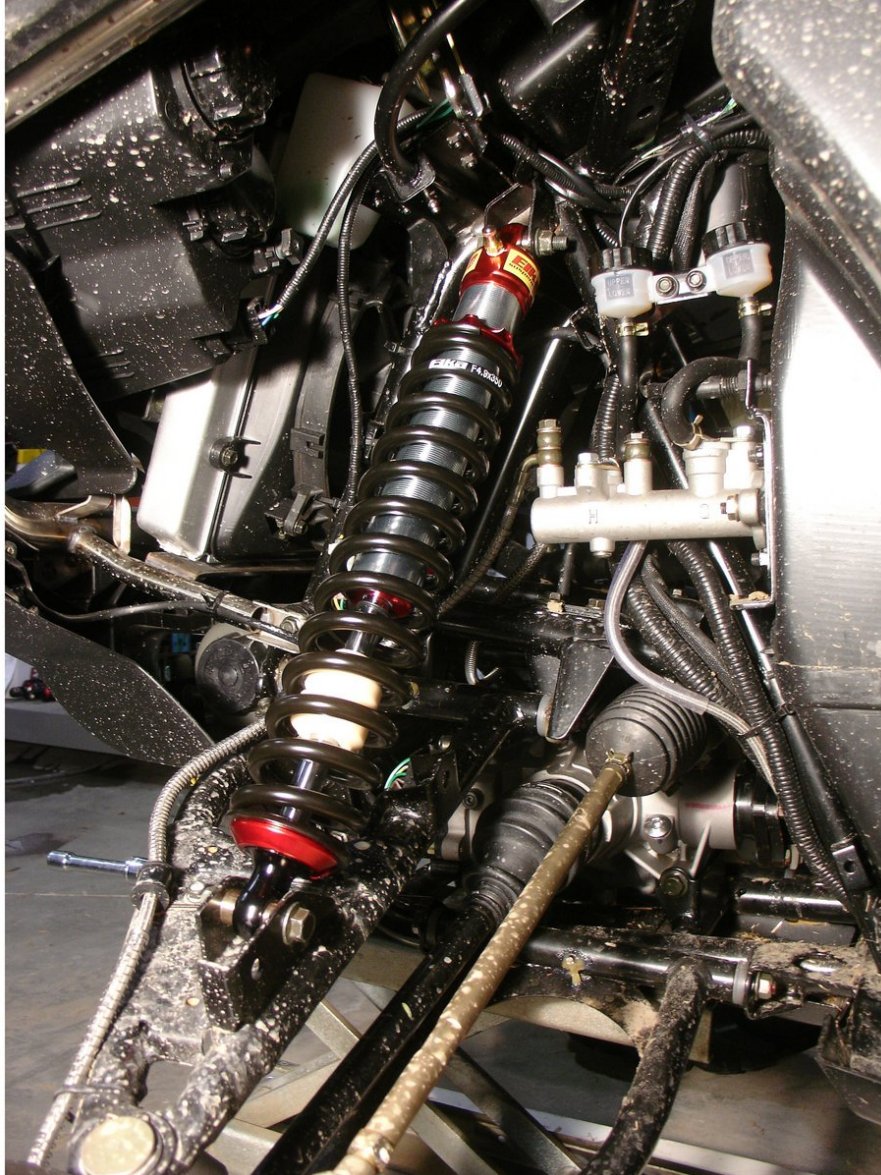

## Step 1 — STAGE 1 SHOCK INSTALLATION

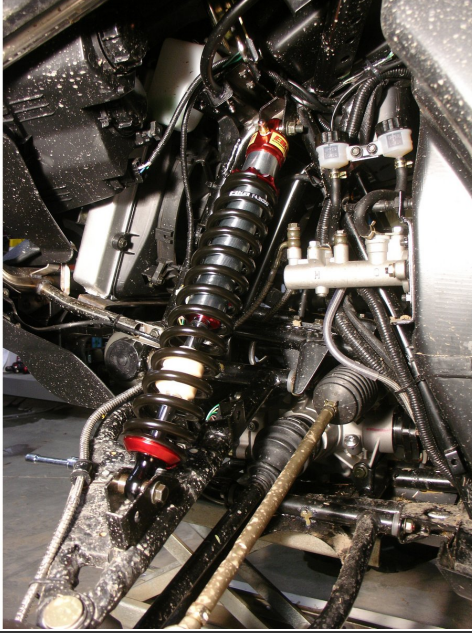

- **FRONT SHOCKS** : SCHRAEDER VALVE AT THE TOP AND TOWARDS OUTSIDE OF THE VEHICLE.

⚠ **IMPORTANT NOTE:** LEFT AND RIGHT REAR SHOCKS ARE IDENTICAL

⚠ **IMPORTANT NOTE:** The schraeder valve on the shocks is not an adjustment ! Shocks are charged with nitrogen during assembly. Only a qualified mechanic with proper tools and qualifications can re-charge the shocks after servicing. Messing with the valve can release nitrogen pressure and prevent the shocks from working properly.

## Step 2 — STAGE 1 SHOCK INSTALLATION



- **REAR SHOCKS:** SCHRAEDER VALVE AT THE TOP AND TOWARDS OUTSIDE OF THE VEHICLE.

⚠ **IMPORTANT NOTE:** LEFT AND RIGHT REAR SHOCKS ARE IDENTICAL.

⚠ **IMPORTANT NOTE:** The schraeder valve on the shocks is not an adjustment ! Shocks are charged with nitrogen during assembly. Only a qualified mechanic with proper tools and qualifications can re-charge the shocks after servicing. Messing with the valve can release nitrogen pressure and prevent the shocks from working properly.